

## How to Install Your Float Switch

Inverted Y-cable included with float switch

IEC connector to pump



IEC connector to solar panel(s)

IEC Connector to float switch


Step 1: Use the float switch Y-cable to connect the pump, panel(s) and float switch together as shown.





Step 2: Slide the weight along the wire so when installed it will hang halfway between the minimum and maximum water levels.

Step 3: Place the float switch into the water trough or tank. You are now ready to switch on the pump and start moving water.

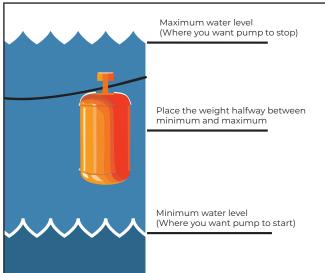

Example of float switch in 'tank full' position. Pump is turned off.



Float switch in 'minimum water level' position. Pump turns on.

